



Prior to Redlike Installation (Printer & Barcode Reader Preparation)

Manual Version: 1.0
(25th November 2019)

Contact:

Customer Support
DESO development
support@deso.cz
+420 511 140 680

Content

- Content 2
- Important Announcement 3
- Printer & Print Label Preparation 4
 - Printer 4
 - Print Label 4
- Barcode Reader Preparation 5

Important Announcement

Please note that DESO development aims to help you set the **dispensing software Redlike 2** correctly. There are some steps which must be taken prior to Redlike 2 installation such as any driver installation and licensing of third-party products. **DESO development is not responsible for such applications and cannot provide support for them.**

Before Redlike 2 installation, please make sure that your PC is fulfilling the [minimal requirements](#).

Printer & Print Label Preparation

Printer

- Printer has all required drivers installed
- Printer is connected to the PC
- Printer is tested by native Windows/Linux software – it is capable of printing pages out
- Your print label's size is set correctly via printer driver parameters

Print Label

- Set your own print template in [Redlike Print Template Editor](#) using correct variables
- Check the variables in print preview in Redlike

Barcode Reader Preparation

- Redlike supports **barcode readers that emulate keyboards**
- Barcode reader must be set correctly according to [manual](#) – it must set the prefix (F8) and suffix (Enter)
- If you are using any other but English keyboard, keypad emulation must be on (last step in barcode reader manual)
- Test the output in a text document to see the correctness of the barcode reader setup
- There is also a possibility to test the barcode output directly within Redlike Client